




My printer loses connection during print

Leapfrog

3D Printers

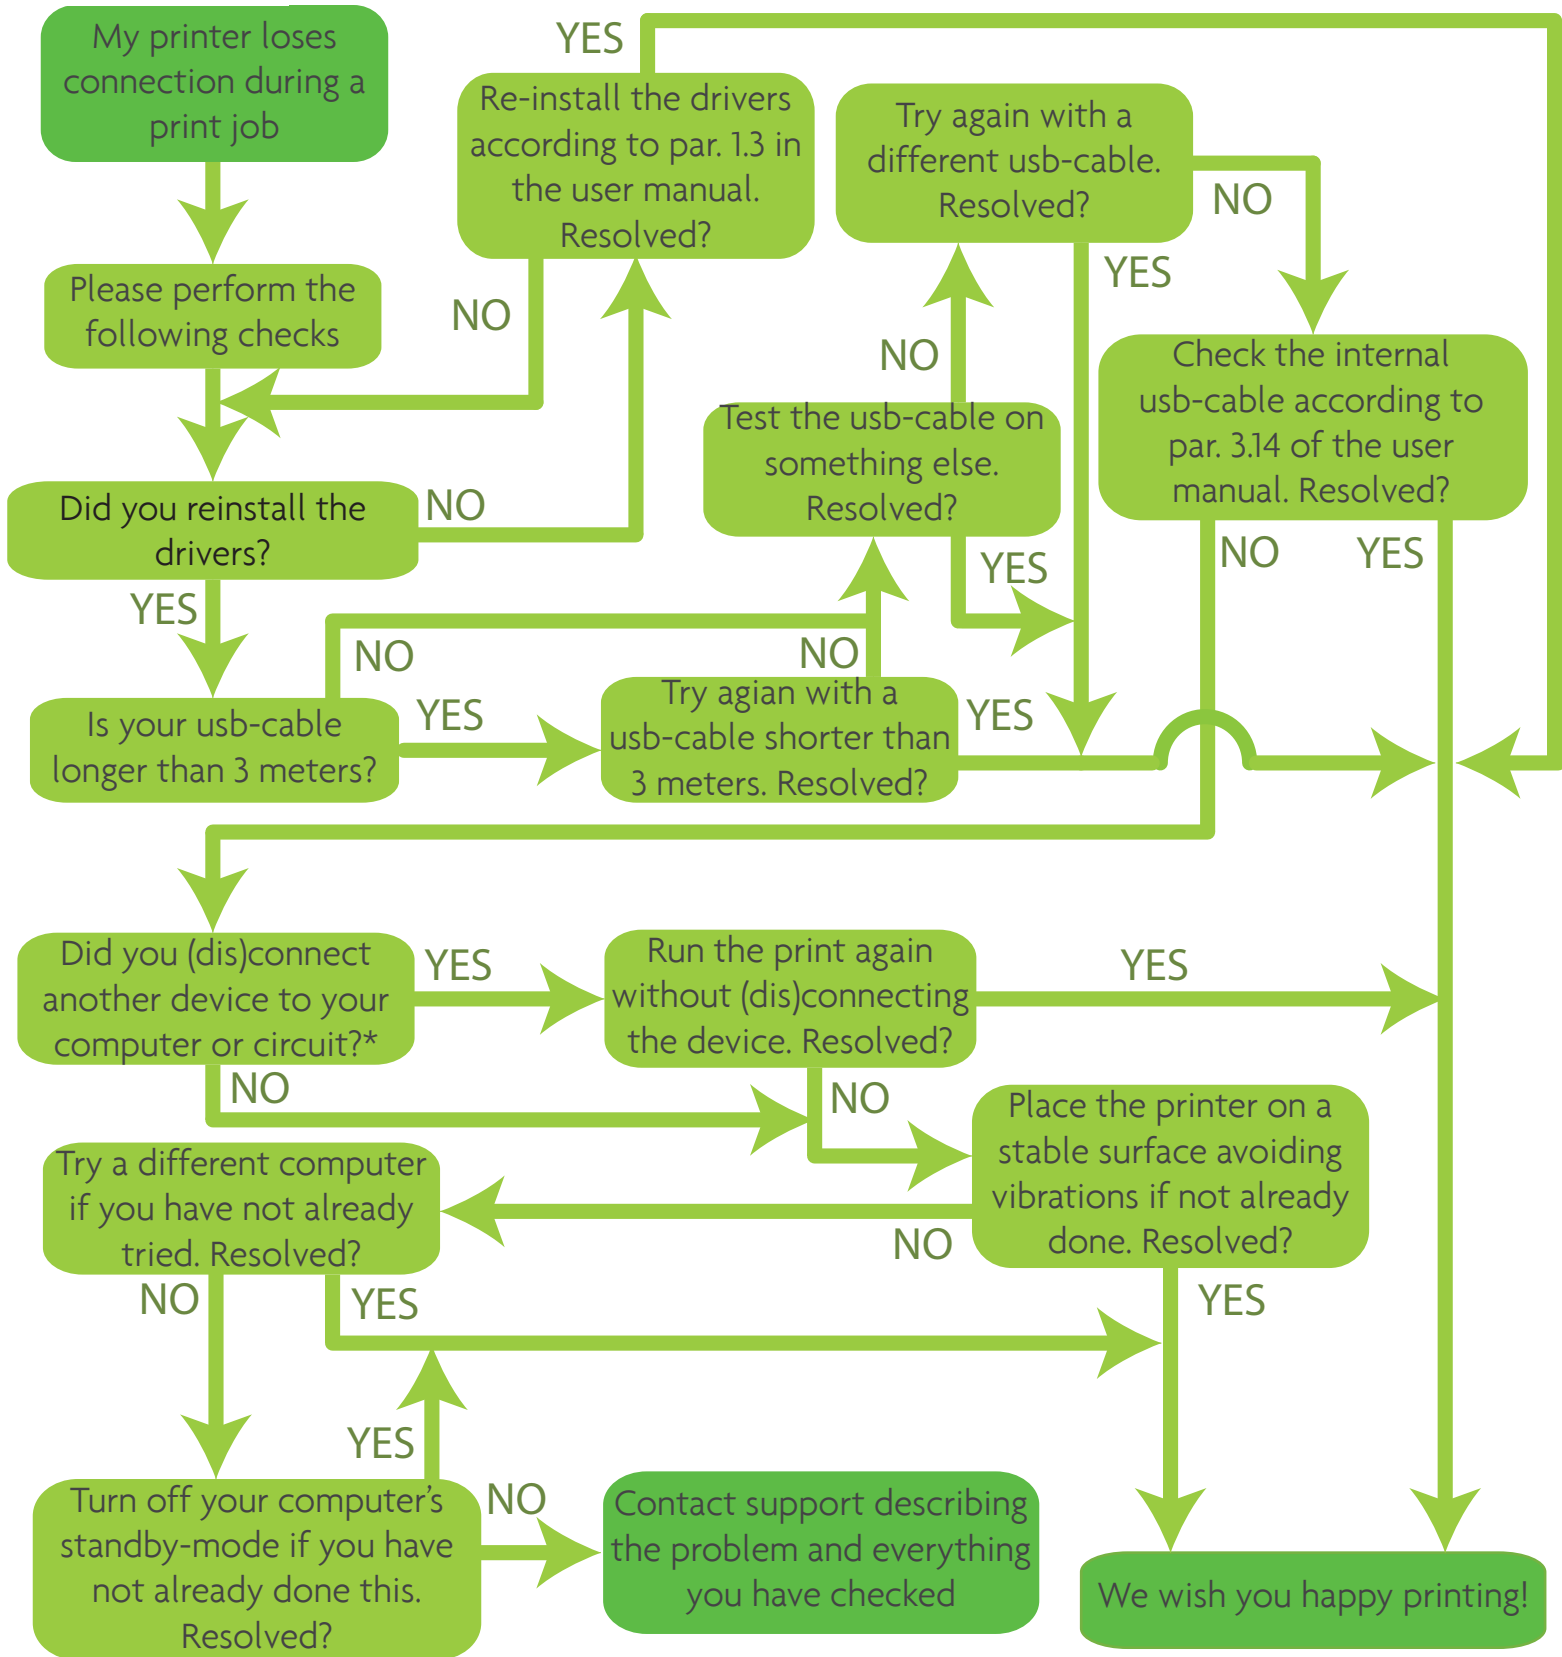

* Connecting or disconnecting another device to either the computer or the same electric circuit can cause disconnection of the printer

You can contact support at support.lpfrg.com